


# Solderless Connection Guide of SMD Strip LED

1. Line up the sharp prongs of the power connector with the SMD Strip Light wires

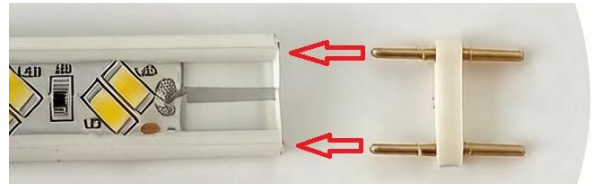

2. Gently insert power connector into the end of the LED Strip Light (always insert sharp pins into strip light and rounded pins into LED Drivers)



3. The SMD LED Strip Lights are polarized. If they do not light up when you first plug them in, simply unplug the power cord and reinstall connection 180° from the original configuration, or insert the power connector into the opposite end of the rope light.



4. Outdoor applications require the use of a rainproof kit and sealant to protect all connections.



5. Insert rounded prongs of power connector into the AC Power Driver Cord



6. Attach an end cap to the end of LED Strips Light run.

